



Hoggers

Application:

For tear-free sizing along and across grain. Machining against feed only combined with scoring sawblade. Defined trimming in front of the finger cut for adjusting the finger fit.

Machine:

Double-end tenoner, finger joint machine with trimming aggregate.

Workpiece material:

Solid wood and wood derived materials.

Technical information:

Steel tool body with HW circular sawblade and hogger elements mounted on flanged sleeve. Can be extended for larger hogger widths. Single sided bevel tooth shape reduces tear outs.




Basic hogger - steel tool body without flanged sleeve

WZ 210 2 01

BEZ	ABM	QAL	Z	ID	ID
	mm			LH	RH
Basic hogger	251x12x80	HW	18	062602 ●	062603 ●
Basic hogger	301x12x80	HW	24	062604 ●	062605 ●

Spare parts:

Part-no.	BEZ	ABM	BEM	ID
		mm		
1	Spacer	115x5x80		028046 ●
2	Cylindrical screw with ISK	M8x20		005946 ●
3	Countersink screw, Torx® 20	M6x10	Torx® 20	006083 ●
4	Screw with ISK	M8x17	for D = 250/350/305/355	006237 ●
5	Allen key	SW 6		005494 ●
6	Torx® key	Torx® 20		117503 ●

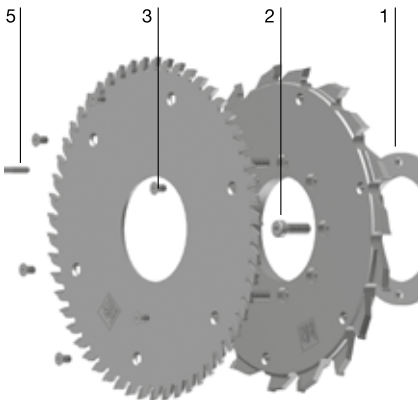


Additional hogger - steel tool body

WZ 210 2 02

D	SB	BO	Z	QAL	ID	ID
mm	mm	mm			LH	RH
251	12	80	18	HW	062652 ●	062653 ●
251	12	80	24	HW	062654 ●	062655 ●

Application:

Tear-free sizing along and across the grain for working against the feed only with a scoring sawblade. Defined trimming in front of the finger cut for adjusting the finger fit.

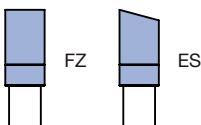

Circular sawblade

WK 800 2 09, WK 800 2 38, WK 801 2, WK 801 2 05

D	SB	BO	Z	ZF	QAL	ID	ID
mm	mm	mm				LH	RH
250	4.4	80	54	FZ	HW	061825 ●	061826 ●
250	4.4	80	54	ES	HW	061837 ●	061838 ●
250	4.4	80	72	FZ	HW	061945 ●	061946 ●
260	4.4	80	72	ES	HW	061860	061861
260	4.4	80	72	FZ	HW	061947 ●	061948 ●
300	4.4	80	48	FZ	HW	061827 ●	061828 ●
300	4.4	80	48	ES	HW	062028	062029
300	4.4	80	72	FZ	HW	061949	061950

Архангельск (8182)63-90-72
Астана (7172)727-132
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89
Иваново (4932)77-34-06

Ижевск (3412)26-03-58
Иркутск (395)279-98-46
Казань (843)206-01-48
Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Липецк (4742)52-20-81
Киргизия (996)312-96-26-47

Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Нижегород (831)429-08-12
Новокузнецк (3843)20-46-81
Новосибирск (383)227-86-73
Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Россия (495)268-04-70

Пермь (342)205-81-47
Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Симферополь (3652)67-13-56
Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Казахстан (772)734-952-31

Сургут (3462)77-98-35
Тверь (4822)63-31-35
Томск (3822)98-41-53
Тула (4872)74-02-29
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Ярославль (4852)69-52-93